

## Configuration Tool II Release Notes

---

### VERSION 4.0.4.0 (21/07/14)

- **Improvement:** Configuration tool will force new password to be different from current password.
- **Improvement:** Added a warning message when two passwords are used and the privacy password has changed from none to AES or DES. The new password is password.
- **Improvement:** Added warning message for incorrect password changes.
- **Improvement:** When leaving insecure mode a dialog box will remind the user of the default login details.
- **Improvement:** Supervisor mode change user password now accepted.
- **Improvement:** Delete group button added.
- **Improvement:** Add popup help for NTP tab.
- **Improvement:** PTP Translator support.
- **Bug Fix:** USB coms and test mode set time fixed (Introduced in 4.0.3.0)
- **Bug Fix:** Fixed a bug that could cause an error when a clock is unexpectedly removed from the network.

### VERSION 4.0.3.0 (21/05/14)

- **Improvement:** TCG 01-G and TCG 02-G support
- **Improvement:** New DCF77 tab created to match the IRIG-B tabs. This is needed because the "Use UTC time" is a global DCF77 setting not output specific. The IRIG-B tab labels have been changed to remove the word "Stream" to make room.
- **Improvement:** The user "add" window now contains a reminder of the default password.
- **Improvement:** Active alarms are now visible on Clock tab when Notification access is disabled.
- **Improvement:** Notification labels - Historic changed to Historic SNMPV1 and Syslog (old) to Historic Syslog.
- **Improvement:** Add power alarms suppress check box.
- **Improvement:** Support for slave PTP Telecom profile.
- **Bug Fix:** SNMP public and private access selection now pointing to correct groups.
- **Bug Fix:** Time display on Clock tab now visible when users have no access to the Test access control group.